

Dios

DIOS-6800
MASSAGE CHAIR
MANUAL



6D
MASSAGE
SYSTEM



CONTENTS





Please read and follow all safety instructions listed in this user manual before use. Basic precautions should always be considered when operating an electrical appliance.

Safety Instructions	2
Product Components	7
Chair Installation	9
Operation Guide	12
Troubleshooting	20
Maintenance	21
Product Specifications	22



- Please read this manual carefully to ensure the correct installation and operation of the massage chair.
- The "Safety Instructions" section provides important safety information. Both "Warning" and "Caution" are critical safety precautions. Please pay close attention.

	Warning	This symbol indicates a warning of possible death or injury.
	Caution	This symbol indicates a caution of possible pain or damage to the body.

	This symbol indicates prohibited behavior.
	This symbol indicates instructions that must be followed for proper operation.
	This symbol indicates that self-disassembly is prohibited.
	This symbol indicates the correct operation of the cable.


- The following information should be kept for future reference.






Warning

	<ul style="list-style-type: none"> • Osteoporosis patients: Consult a doctor before use. • People with heart disease, including those with embedded pacemakers or other medical electronic devices: Consult a doctor before use. • Pregnant women or individuals with health issues: Consult a doctor before use. • Patients with a high fever, perceptual disabilities, or individuals over 80 years old are prohibited from using this machine. • Children are not allowed to use the chair. • Do not operate the chair after consuming alcohol. • Do not sleep in the chair. • Do not use the chair when your body is wet. 	<p>People who are not suitable to use the chair</p>
	<ul style="list-style-type: none"> • Ensure there are no children, pets, or objects around (under, behind, or in front of) the chair when adjusting the backrest, leg rest, or reclining position. • If you experience any discomfort during operation, stop immediately and consult a physician. • Avoid strong massage on the head. • Do not massage the belly or knees. Be cautious when massaging the neck. • Children or pets are not allowed to play on the chair, especially during operation. Standing or sitting on the backrest or armrest is prohibited. • Individuals with limited mobility or difficulty expressing themselves must be supervised continuously during use. 	<p>Accident /injury</p>
	<ul style="list-style-type: none"> • Accident/Injury Prevention: Insert the plug into a correct and suitable power socket. Ensure the plug is fully inserted to reduce the risk of short circuits or fire. • Unplug the power when not in use. Stop all massage functions and turn off the power switch before unplugging. 	<p>Fire and electric shock</p>
	<ul style="list-style-type: none"> • Do not fold the massage cushions for storage. • Do not run the machine without a load for extended periods. 	<p>Accident</p>
	<ul style="list-style-type: none"> • Do not use the power cord, plug, or socket if they are damaged or have loose connections. • Use only the rated voltage to avoid fire, electric shock, or malfunction. 	<p>Fire and electric shock</p>




Warning

	<ul style="list-style-type: none"> • If the chair is dysfunctional or broken, splashed with water, or falls into water, please have it repaired by a professional repairman or send the chair to an assigned service agent. Self-modification, disassembly, or maintenance is forbidden. • If the power cord or plug is damaged, please don't replace it yourself, please contact us or an appointed dealer for replacement. • To avoid electric shock or body injury, please don't open or disassemble any part of the chair, there is not any attached part of the chair for maintenance by customers. • Check if leather or cloth material on the back and other areas are broken or not. If broken, even if small, please stop using the chair, unplug the power, and have it repaired. 	<p>Disassembly and maintenance</p>
---	---	------------------------------------


Caution

	<ul style="list-style-type: none"> • Please operate the chair when it is flat or in a leveled place. 	<p>To avoid sudden falling.</p>
	<ul style="list-style-type: none"> • Position the chair 4 inches from the wall to allow for sufficient space to recline up and down. 	<p>To make sure the back lying.</p>
	<ul style="list-style-type: none"> • The maximum suggested operating time is 20 minutes. 5 mins for each position beginning with the slight- step massage. A continuous massage in the same position may cause uncomfortable feelings. 	<p>Too long time massage is bad for your body.</p>
	<ul style="list-style-type: none"> • Before sitting on the chair to avoid injury. Please inspect everything to confirm that the massage heads are in the correct position. 	<p>To avoid accidental injury.</p>
	<ul style="list-style-type: none"> • Please make sure that the power switch is on "OFF" position before inserting the plug into the socket. 	
	<ul style="list-style-type: none"> • Turn off all controls before removing the plug from the outlet. 	<p>To avoid the accident when turn on the power.</p>
	<ul style="list-style-type: none"> • Make sure the plug is completely inserted into the socket. 	<p>To reduce short circuits and any fire hazard.</p>
	<ul style="list-style-type: none"> • Check whether there are damages on the wire and make sure there is no water or rubbish on the wire. • Correctly installing the wire. The plug must be inserted into the socket with the connect,  the connect couldn't be bent or cut off. 	
	<ul style="list-style-type: none"> • Don't use or store the chair in a wet environment like near the swimming pool, or bathroom. • Keep the chair and remote control dry at all times. • Don't use the chair when your body is wet. 	<p>To avoid leakage or electric shock.</p>

Caution

	<ul style="list-style-type: none"> • Don't press with your hands or step on the massage heads with your feet. • Don't put your hands between the working massage heads. • Don't put your hands or feet in the gap between mechanical parts. • Don't drop or insert anything into the slot of the massage chair. • Don't stand or sit or put anything on the backrest, armrest, or legrest. • Don't stand on the chair during the operation. Don't move the chair during the operation. • Don't pull out the plug or turn off the power during operation. • Don't put your hands or head between leg-rest or beneath. • Don't use the massage chair while wearing hair ornaments. • Don't put hard things in your pocket when taking buttocks and huckle massage. • Don't sit or press on the backrest when the chair is in a reclining position. Don't use it on bare skin or wearing thin clothes, thin clothes may cause a better massage effect, But it also may cause irritation to the skin or cryogenic burns. 	<p>To avoid accidents or injury</p>
	<ul style="list-style-type: none"> • Keep the chair away from heat, wet, sharp things and corrosive, inflammable, explosive environment. • Using an electric blanket or other heating products on the chair is forbidden. • Don't put in the space of a serious or corrosive gas environment. • Don't put the chair in small space places or use it in bad air circulation places. 	<p>To avoid fade, discolor on upholstery or hardened, deteriorated on PU.</p>
	<ul style="list-style-type: none"> • Keep the chair away from the stove or other heating products. • Don't put the chair directly under the sun or other high temperature places. • Don't use the chair outdoors. 	<p>To avoid electric shock.</p>
	<ul style="list-style-type: none"> • Make sure to install the wire in the correct way(In-correct installation may cause electric shock. If you don't know how to install, please find a professional electrician) • Don't use a plug adapter (If the enclosed plug doesn't match with socket, please don't change the plug by yourself and find a professional electrician to install a matched socket.) 	<p>To avoid electric shock.</p>

Caution

	<ul style="list-style-type: none"> • Unplug the power before cleaning the chair. • Unplug the power after using the chair. 	To avoid electric shock or fire hazards.
	<ul style="list-style-type: none"> • Unplug the power when any damage on the power. 	
	<ul style="list-style-type: none"> • Hold the plug to unplug the power but to not try to pull the wire to unplug the power. 	To avoid accidents
	<ul style="list-style-type: none"> • Please turn off the power switch and unplug the power after massage. 	
	<ul style="list-style-type: none"> • Unplug the power immediately when electricity goes off. 	



Warning : 1.Do not use it when gets wet.
 2.The disabled people who need supervision.
 3.The chair has heat function, people who are insensitive to heat must pay high attention.

| Grounding instruction |

The chair is equipped with a cord having a grounding conductor. The plug must be plugged into an appropriate socket that is properly installed and matched with the plug.




The earth wire is not allowed to be in these places

Gas pipe: probably cause explosions or fire.
 Phone wire and lightning rod: probably cause electric shock and fire when thundering.
 Water pipe: earth wire is useless where there are plastics

PRODUCT COMPONENTS


| Main body diagram (front) |

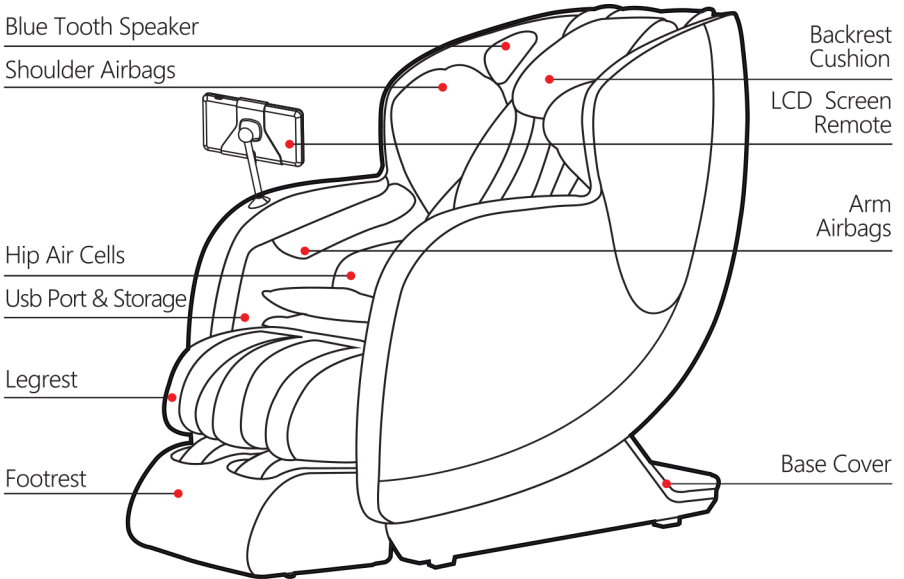


Built in Premium Bluetooth Speakers



| Main body diagram (rear) |

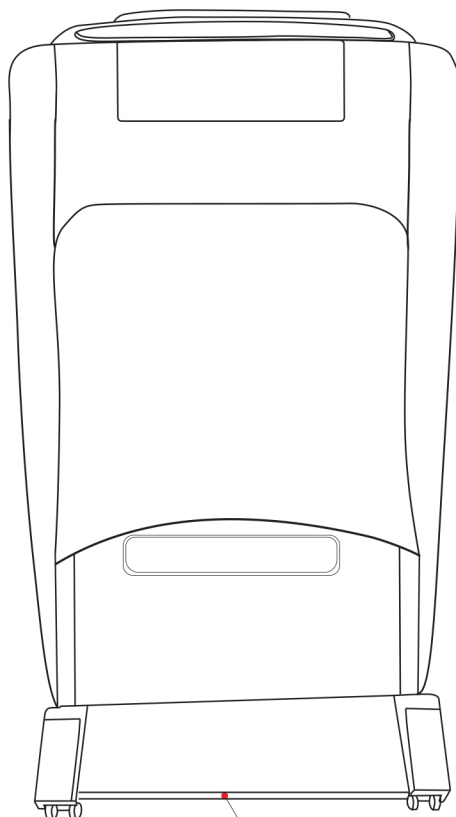

(The Reserve Side)

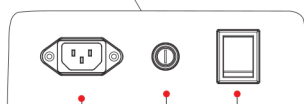

Power Cord Socket


Safety Fuse

Power Switch

CHAIR INSTALLATION


1. Calf lift adjustable

- The calf lift angle can be automatically adjusted by pressing the 'Leg Up' or 'Leg Down' buttons.
- The spring extension distance of the calf is approximately 5 inch.

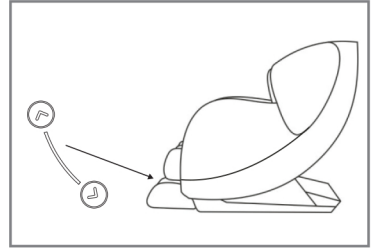

2. Before use


Use the controller to place the backrest frame to the extreme position, raise the calf to the highest position and raise it to the longest position. Make sure there is sufficient space around the massage chair before the operation.

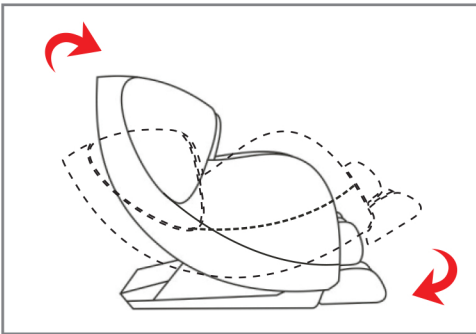

Use the controller to place the backrest frame to the extreme position, raise the calf to the highest position and raise it to the longest position. Make sure there is sufficient space around the massage chair before the operation.


3. Moving the massage chair

After completing the installation, put the chair in an incline / upright position to move the chair easily.

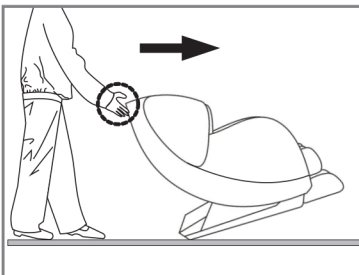

- As illustrated, tilt the chair back onto its wheels at 45° angle. Slowly push and maneuver the massage chair to the desired location. Lower the massage chair slowly and smoothly until it is fully flat on the ground.

4. Place the massage chair in an open area |

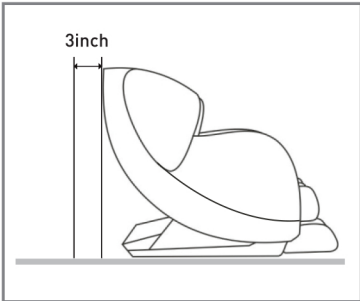


- Allow sufficient space around the chair for recline purposes.

- 3 inch distance for the back side and 19.7 inches in front of the footrest.

* Do not put the power cord under the relaxed chair!

5. Install controller components |


Connect the data line plug on the controller component to the connection port located above the right side of the armrest frame (note the concave and convex points between the plug and the port); then rotate the locking nut on the plug clockwise to tighten it. (See the diagram below)

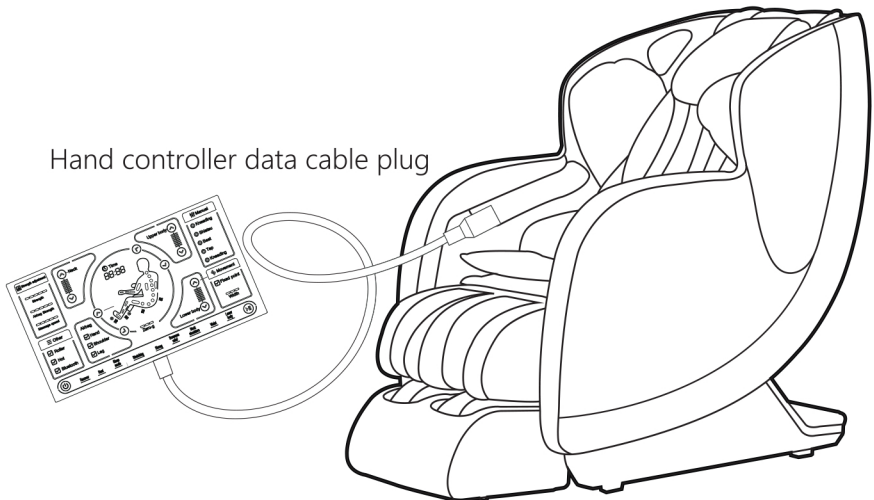

CHAIR INSTALLATION

| 6. Floor protection |

Before use, it is recommended that you place a carpet underneath the massage chair. Use a cushioning medium to avoid noise or damage to the floor.

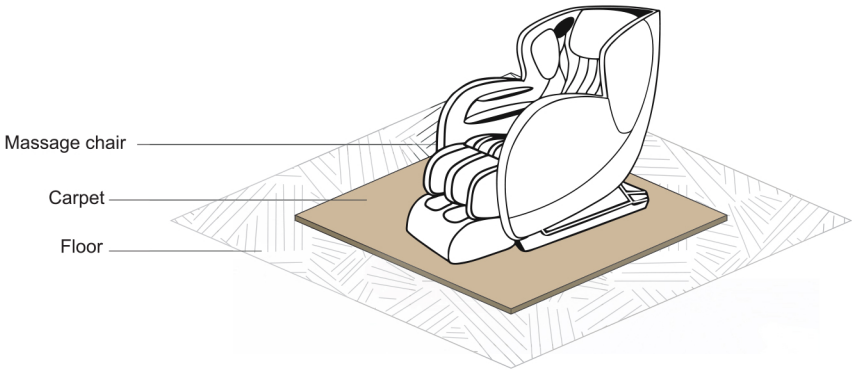

CAUTION

- * Do not move the massage chair when occupied or in use.
- * Moving the massage chair may cause damage to the floors. Floor protection is recommended (e.g. rugs or carpets).
- * Do not drop or suddenly let go of the chair when moving as it may damage the chair.
- * Two persons are recommended when moving and extra care when handling the massage chair.
- * Make sure the power plug & remote is disconnected to prevent damage. The warranty will not cover the power cord & remote if the chair is moved with the plugs connected.

Remote Controller

Power on/off




- Power switch button : Turn the whole machine massage function on/off.
- In the powered on state, press this button to turn on the massage chair, then select other buttons (such as automatic programs, massage techniques, etc.) for a massage experience.
 - Press this button again to turn off the whole machine function, and the massage chair will reset.




Auto modes


- Fully automatic program button: Press this button to activate the massage chair, which offers nine automatic massage programs to choose from.

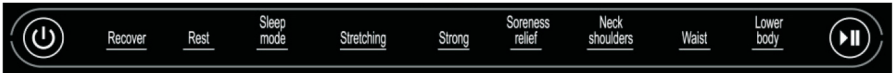


- Recover : Fatigue recovery through simulated manual massage stimulates the body, effectively alleviating fatigue and muscle tension.
- Rest : Leisure relaxation through gentle techniques alleviates fatigue in the neck and shoulders.
- Sleep Mode : Sleep mode through simulated human techniques massages, breaking down stress and soothing the body and mind, thereby improving sleep quality.
- Stretching : Thai-style stretching features comprehensive and strong characteristics, which can stretch the body and effectively stimulate the muscles, promoting relaxation and flexibility.
- Strong : Strong waist and back massage specifically targets the spine through techniques such as acupressure, tapping, and kneading.
- Soreness Relief : Relief of soreness through simulated techniques that apply strong pressure from the neck to the upper thigh, alleviating discomfort.
- Neck Shoulders : Neck area improvement through techniques such as kneading and tapping to massage the shoulders and neck, relieving soreness.
- Waist : Waist and hip relaxation through massage of the waist and hip acupoints, alleviating waist and hip soreness, enhancing muscle vitality
- Lower Body : Gentlemen's decompression through gentle massage techniques, soothing tense nerves, relaxing the body

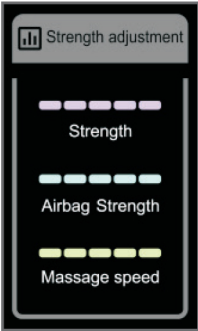


- Strength : For every increase of one level in 4D intensity, the massage head of the mechanism will protrude approximately 0.6 inch.
- Airbag Strength : As the airbag intensity increases by one level, the inflation time of the airbag will increase by 2 seconds.
- Massage Speed : As the massage speed increases by one level, the speed of the movement mechanism will increase by 10%.

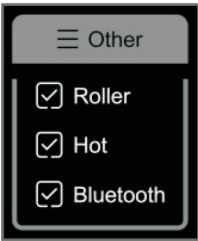


- Roller : Foot and calf roller massage can be performed.
- Heat : Heating can be performed on the calf and back; under human load conditions, the measured maximum temperature is approximately 50°C.
- Bluetooth : To connect to the mobile phone via Bluetooth, open the device (Bluetooth name:DIOS-6800 massage chair).

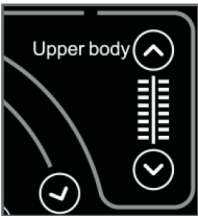

- Upper Body : When the upper shoulder position detection of the massage position is not completed, the movement mechanism can be adjusted to move upward.

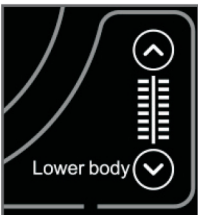


- Lower Body : When the lower shoulder position detection of the massage position is not completed, the movement mechanism can be adjusted to move downward.

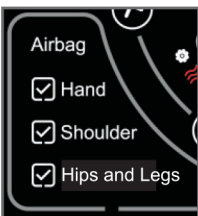

- Airbag Area : Selectable airbag massage positions.
 - * Hand : Arm airbag inflation massage
 - * Shoulder : Shoulder airbag inflation massage
 - * Hips and legs : Hips and leg, foot airbag inflation massage, sitting side airbag inflation massage


OPERATION GUIDE

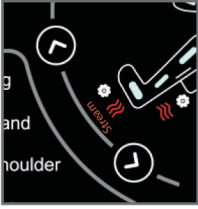

- Leg elevation : Press and hold this button, the calf will automatically rise to the highest position.
- Leg Descend : Press and hold this button, the calf will automatically descend to the upright position.




- Zero Gravity Levels 1, 2, 3 : Three variations for adjusting the reclining angle of the massage chair backrest.

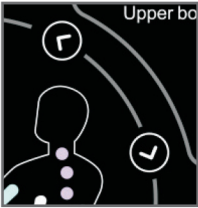

- Backrest Ascend : Press and hold this button, the backrest will automatically rise to an upright position.
- Backrest Down : Press and hold this button, the backrest will automatically lower to the lowest position.

- Movement Mechanism Up : Manual mode adjusts the upper movement mechanism upwards


- Movement Mechanism Down : Manual mode adjusts the lower movement mechanism downwards

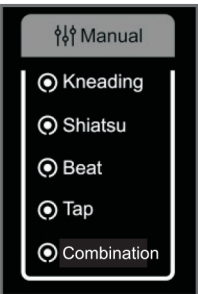

- Kneading : Knead the movement mechanism using mechanical motion or air bags to simulate the actions of kneading and pinching by human hands on the body.

- Shiatsu : Shiatsu mode is a massage setting on some devices that uses finger-like pressure to massage the body. Shiatsu massage is a Japanese therapy that involves applying pressure to specific points on the body to improve circulation and relieve tension.

- Beat : Hit the massage mechanism relying on mechanical motion to simulate the striking action performed by human hands on the body.

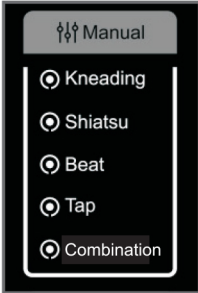

- Tap : The tapping speed is relatively light with a slightly faster frequency of tapping actions, and there is a brief pause between tapping cycles for a massage action.
- Combination : A "kneading and knocking" mode, typically found on massage chairs or other similar devices, refers to a massage setting that combines the deep tissue manipulation of kneading with a rhythmic "knocking" motion, which applies quick, repetitive pressure to target muscle tension and promote relaxation, often used on the back area.




- Fixed Point : The movement mechanism moves up and down on the back for massage. The movement mechanism is fixed in one position for massage.
- Wide/Medium/Narrow Massage : Control the range of the movement mechanism's massage width.



1.6D DUAL MECHANISM

The 6D flexible soothing airbags massage mechanism, achieves sync massage on body up and down in different positions, more massage techniques, greater massage experience.

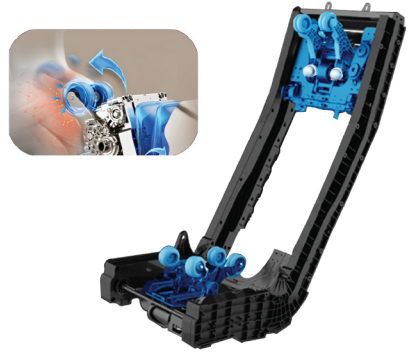

2.125" SL Long Track

125" SL long track and dual roller system, providing thorough relief from neck to buttocks.

3.Acupressure Points


Acupressure points on arm massage area to amplify the massage effect.



4.Calf and foot massage techniques

Three-stage roller massage tingles and relaxes starting from the feet. Rotating gua sha, massage neck press.

A machine can be synchronized to enjoy the foot massage, from the foot to the whole body to dispel fatigue.

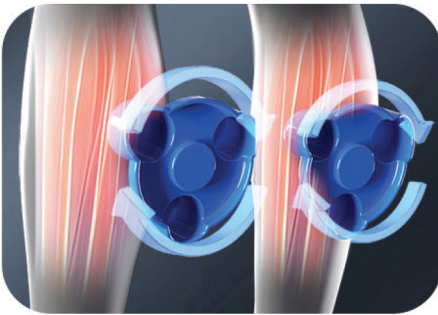

Calf Roller Scraping




Top Kneading & Gua Sha Massage

5.3 Levels Zero Gravity Positions

Zero gravity creates completely relaxing, natural and comfortable massage posture, so that the back and legs can be tilted synchro-nously at zero pressure, the space capsule is tilted state, so as to enjoy the fun of the zero-gravity massage.




| 3 After use |

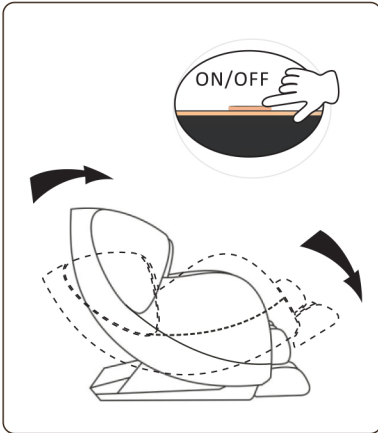

1. After the massage program is completed return the massage chair to an upright position by turning off the massage chair.

Please check the surroundings prior to adjusting the recline angle, paying special attention to children or pets that may be in close proximity.

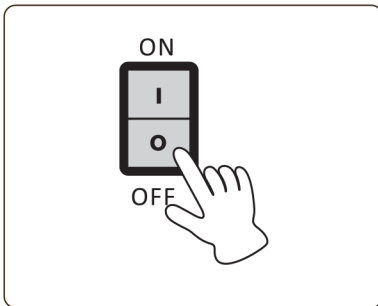

2. Press the power button to power off the massage chair and return the remote controller to the storage area in the arm pocket.

3. Turn off the main power switch when you are not using the chair for a long period. Remove Plug from the power outlet to avoid accidents by kids and pets.

4. Do not operate with wet hands.

TROUBLE SHOOTING

If the sounds or movements are not normal, please turn off the massage chair and remove the plug from the electric outlet. Please contact the customer service department for further assistance.

1.855.646.9500 / 1.714.823.3338, service@kahunachair.com

Problem	Solution
The massage chair is connected to power but is not functioning.	Check to see if the power plug is inserted or if the power outlet is functioning properly.
The remote controller is responding, but the massage chair is not functioning.	The massage chair may have automatically shut down due to overheating protection devices. Please turn off the power and allow the chair to cool off for 30 to 50 minutes.
Both the remote controller and massage chair are not responding.	The massage chair automatically turns into "full stop" mode when a massage program is completed. Please press the power button again to turn off the chair.





KAHUNA CHAIR PRODUCT WARRANTY REGISTRATION
WWW.KAHUNASERVICE.COM

MAINTENANCE

| Use a dry cloth to clean |

Turn off and pull out the plug before cleaning the massage chair, do not touch the plug with wet hands.

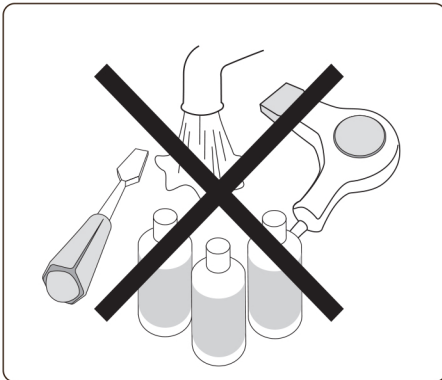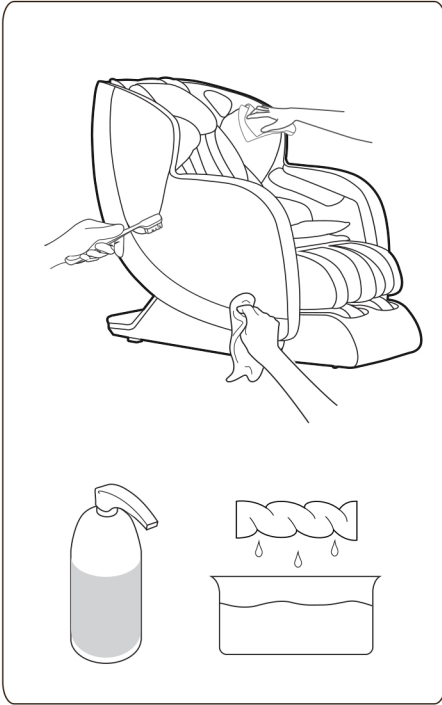

Prohibit using liquid cleaning products like water, alcohol, or other cleaning products to maintain a good quality.

PRODUCT SPECIFICATIONS

Description	Specifications
Product Name	Dios Massage Chair
Model No.	Dios-6800
Rated Voltage	AC 110V~220V
Rated Frequency	50/60Hz
Rated Power Consumption	180 W
Dimension (LxWxH) Inches	57 x 30 x 44 inches
Weight (LBS)	Net Weight : 174 lbs Gross Weight : 209 lbs



Product Massage Chair

Model DIOS-6800


Developed by RJ Distribution INC

11125 S Knott Ave, Suite D

Cypress, CA 90630

Tel 1-855-646-9500

Email INFO@KAHUNACHAIR.COM

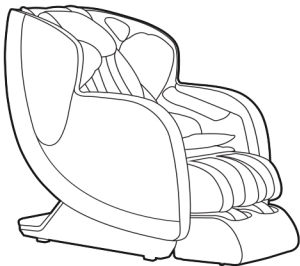

You must register warranty at www.kahunaservice.com

INSTRUCTION MANUAL
MODEL:DIOS-6800

Please read this user manual thoroughly prior to operating the massage chair. Store this booklet for future reference.